



⚠ WARNING

These units should be operated only by authorized adults who have read and understand these operating instructions. Movement and/or operation of these tables by children could result in serious injury! It is dangerous to leave children unattended in the area of folded tables. Do not use tables as room dividers. To avoid table tipping over, push from end of table; **DO NOT** push from the side. If necessary to replace or repair leg assembly, contact Palmer Hamilton. Center legs contain springs under compression that may be hazardous and could result in serious injury if released without following proper procedures. Do not sit or stand on tabletops. Do not stand on benches.

MOVING THE TABLE

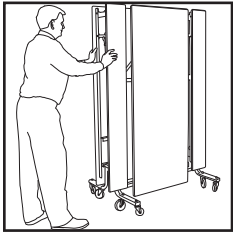

CORRECT WAY
To avoid table tipping over, push from the end of folded table.

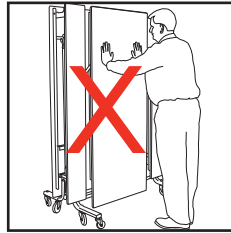


INCORRECT WAY
Pushing from the flat table side may cause tipping.


MAINTENANCE TIPS

1. Lubricate up and down latches on a regular basis.
2. Check nuts and bolts on a regular basis.
3. Lubricate all pivot points as required.
4. Use mild soap and water, damp sponge for general cleaning. For tougher stains, visit wilsonart.com.
5. **DO NOT** power wash!


TO OPEN THE TABLE FOR IN-USE POSITION

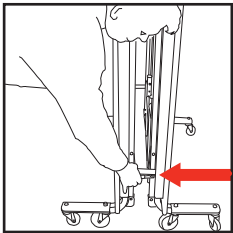


STEP 1
Table is held in closed position by a retainer latch. To open, squeeze latch.

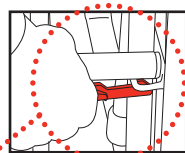


Close-up of retainer latch.

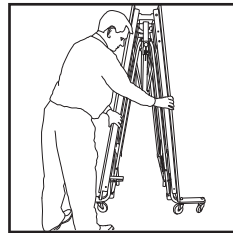


STEP 2
Position hands half of the way down for good leverage and spread the two sections apart.

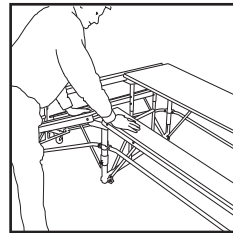

STEP 3
With hands on top of benches, push downward to floor until latch automatically locks into place.

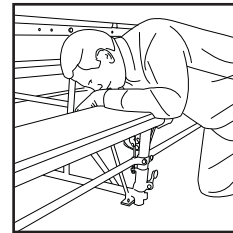


STEP 4A
To adjust the Down Latch apply your body weight onto the bench top until the center leg touches the ground, continue applying pressure while completing Step 4B.

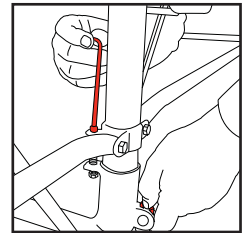


STEP 4B
Use an allen wrench to tighten the adjusting screw until the Down Latch cannot be released by hand. Then back off 1/8" turn.


TO CLOSE THE TABLE FOR STORAGE POSITION

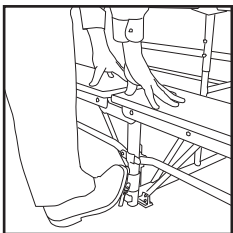

STEP 1
Push down on benches while disengaging Down Latch on center post.

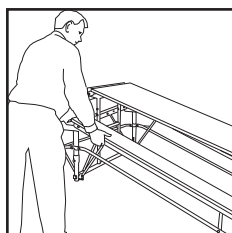

STEP 2
Grasp benches directly over center. A brisk lift upward achieves the initial closing action.

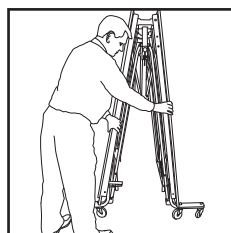

STEP 3
Raise table to teepee position — transfer hands to benches about half of the way down for good leverage. Close table to engage latch.



Customer Service 800-788-1028

As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 12/2011