
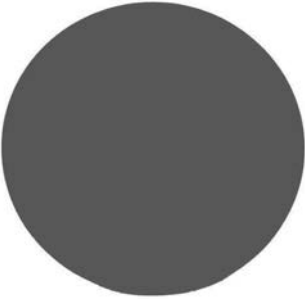










Square/Round Table Top • INSTRUCTIONS

(MTBX22, MTBX30, MTBX36, TTSQ3030, TTSQ3636, TTSQ4242, TTSQ4848, TTRD30, TTRD36, TTRD42, TTRD48)


**Organize your parts. You will need a phillips head screw driver, crescent wrench, tape measure and pencil, drill(optional).
Two people are required for assembly.**

<p>A</p> 	<p>A2</p> 	<p>B</p> 	<p>C</p> 	<p>E</p> 	<p>F</p> 	<p>G</p> 	<p>A. Square Top A2. Round Top B. Large Base C. Cylinder D. Spider E. Rod F. Foot (4) G. Screws (8)</p>
---	--	--	---	---	---	---	--


Step 1: Screw 4 feet (F) into base (B) leg ends.




Step 2: Remove the nut from rod (E) and set aside.

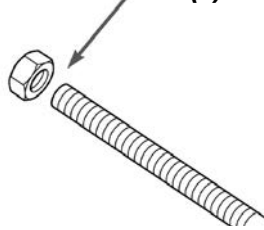


Step 3: Insert the rod (E) through the hole in the base (B) and attach nut to exposed rod end under base bottom.




STEP 4: Next place the cylinder (C) over the exposed metal rod (E).



STEP 5: Place the exposed end of the metal rod (E) through the hole in the spider (D) and twist the second nut back onto the rod until tight


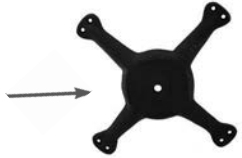


The product should now look like the example to the right.





Step 6: Prepare your Template (INCLUDED) by adhering both template pages to one another on the dashed line.


STEP 7: Turn Table Upside down. According to your table top(Square or Round) draw 2 diagonal lines across the table as shown below.

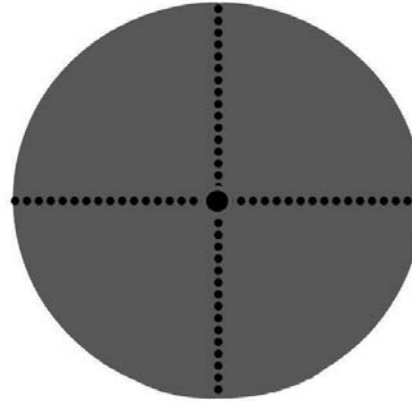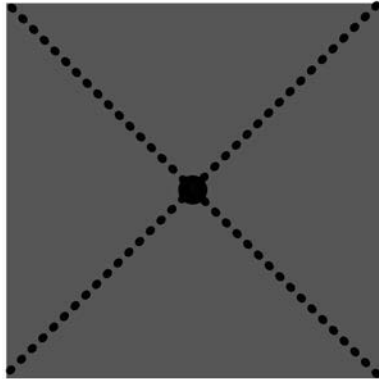


STEP 8: Place dot 1, located on the template, directly over the crossing lines.

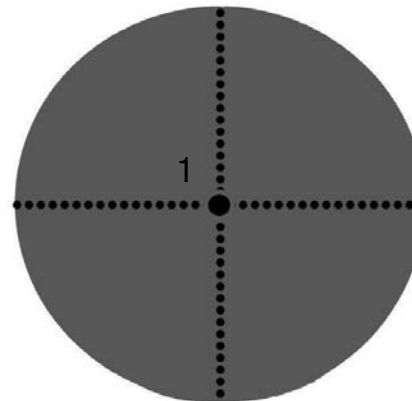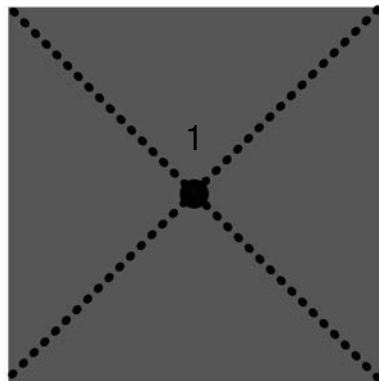


STEP 9: Once aligned, mark template dots 2,3,4,5 on table bottom.

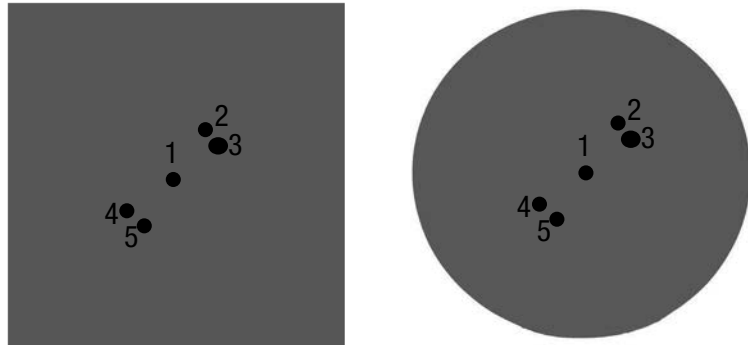

STEP 10: Place table top (A,A2) flat on the floor and set the completed base over the center.

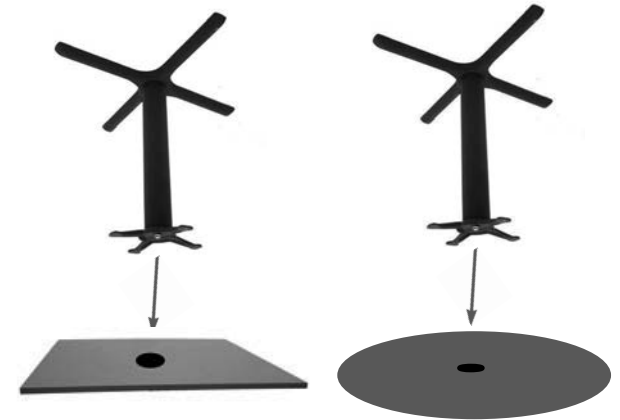

STEP 11: Line Up the marks made on table from step 9 with the holes on the spider arms. Attach using 8 Screws(G) and flip table over.

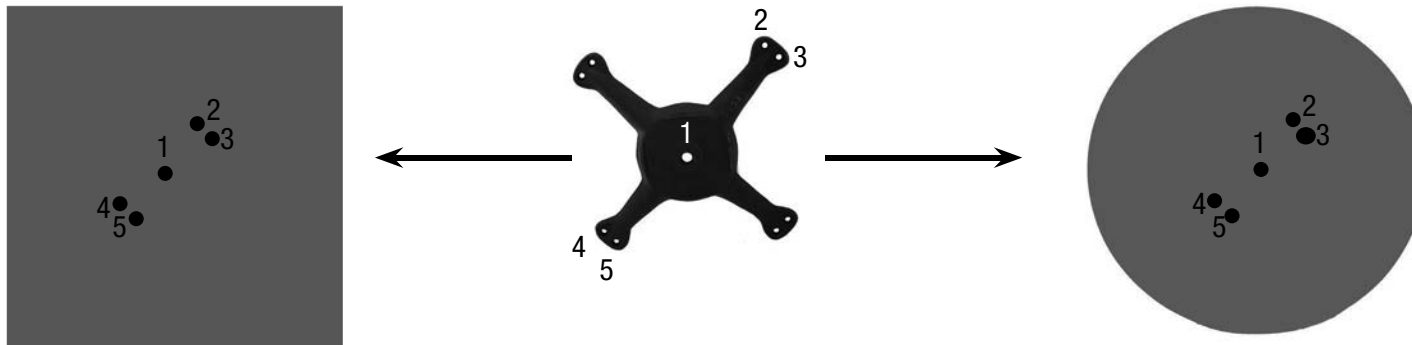

IMPORTANT NOTICE

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.

Check to be sure that you have all parts and hardware.

Remove all wrapping materials, including staples & packing straps before you start to assemble.



Do not tighten all screws/bolts until completely assembled.

Keep all hardware parts out of reach of children.

Any problems or questions please call Regency Office Furniture at 1-866-816-9822

-The Outside dots are for 48" Table tops and MTBX 36 X-Bases.

-The Inside dots are for 30", 36" and 42" Table tops and MTBX 22 & 30 X-Bases.

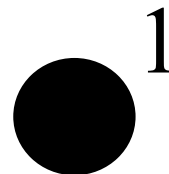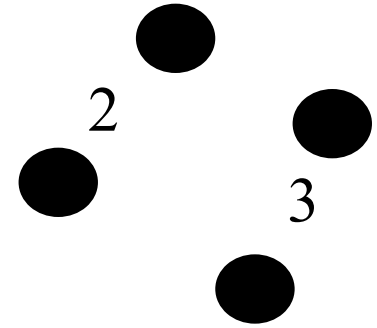

LINE UP TOP EDGE OF SECOND SHEET HERE.

