




Sandusky Lee Corporation  
Combination Kit Installation Instructions

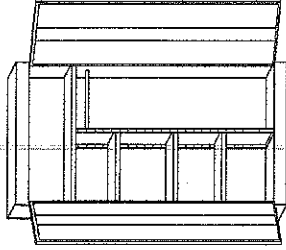

Parts Required

Half Shelf - 3 req'd


Full Width Shelf - 2 Req'd  
(Supplied with Cabinet)

Hanger Rod Supports - 2 Req'd

Hanger Rod - 1 Req'd

Shelf Brackets (Clips) - 20 Req'd  
(Supplied with Cabinet)

Plastic Push Pins - 4 Req'd

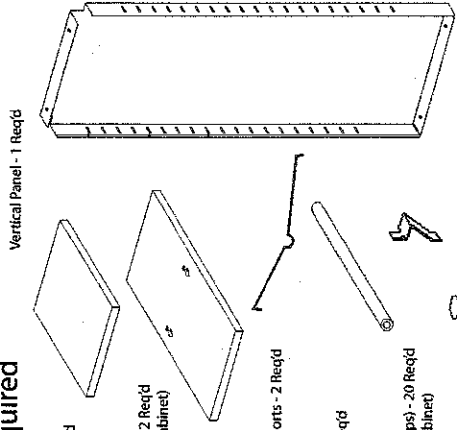

Vertical Panel - 1 Req'd

**1**

Remove all shelves, vertical panel and hardware.


Install 4 shelf clips into the slots closest to the bottom of unit; one in each corner.

Place a full width shelf onto the shelf clips. Make sure the arrows on the shelf are pointing to the left.


**2**

On cabinets taller than 60 inches, stand the vertical panel inside the cabinet with the notched end on top and the bent flanges pointing to the left. See figure A.


Rest the other full width shelf in position on top of the panel. Once again the arrows must point to the left. Determine the appropriate height slots for the shelf clips and install one in each corner. Position the shelf onto the panel and the clips.

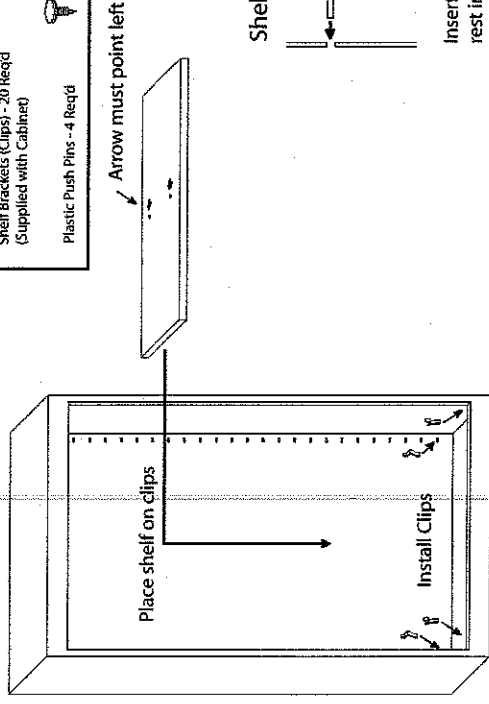

Shelf Clip Installation

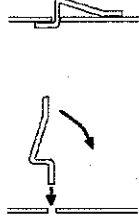


Insert top of shelf clip into slot and rest into position

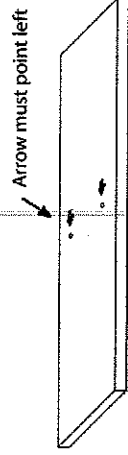


On 60 inch tall cabinets the top shelf will be located inside the top of the cabinet. Position the shelf inside the cabinet, with the arrows pointing to the left, and use the vertical panel to raise it into position inside the top. The bent flanges on the panel must be pointing to the left. See figure B.

**B**  
60 inch tall cabinets only

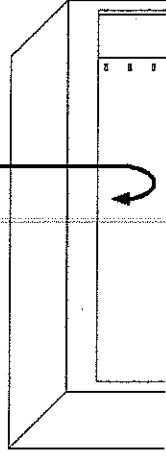

Determine the appropriate height slots for the shelf clips and install one in each corner. The shelf should now be resting level on the panel and the clips.

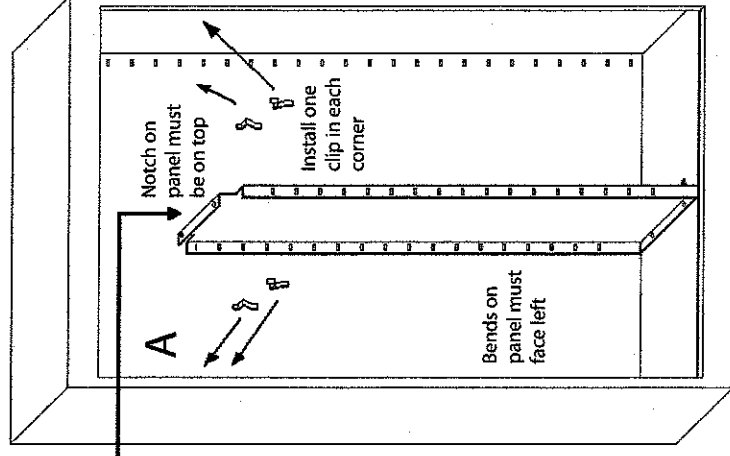


Install one clip in each corner

Use the panel to raise shelf into cabinet top




### 3

On cabinets taller than 60 inches, align the oval holes in the top shelf with the holes in the panel. Insert a plastic push pin through the hole from the top down and press it down until its head is flush with the shelf. Repeat process for the remaining top hole. See figure A.

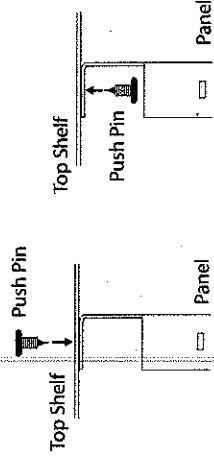

**A** Typical installation

On 60 inch tall cabinets, the plastic push pin must be inserted from the bottom. See figure B.

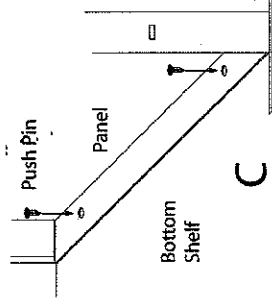

**B** 60 inch tall cabinets only


**C**

Align the bottom panel holes with the oval holes on the bottom shelf and install Plastic Push Pins. See figure C.

### 4




Install the 3 half shelves at desired locations on the left side of the vertical divider. For each shelf, install a shelf clip in each corner, two on the front and back cabinet slots and two on the front and back vertical divider slots.

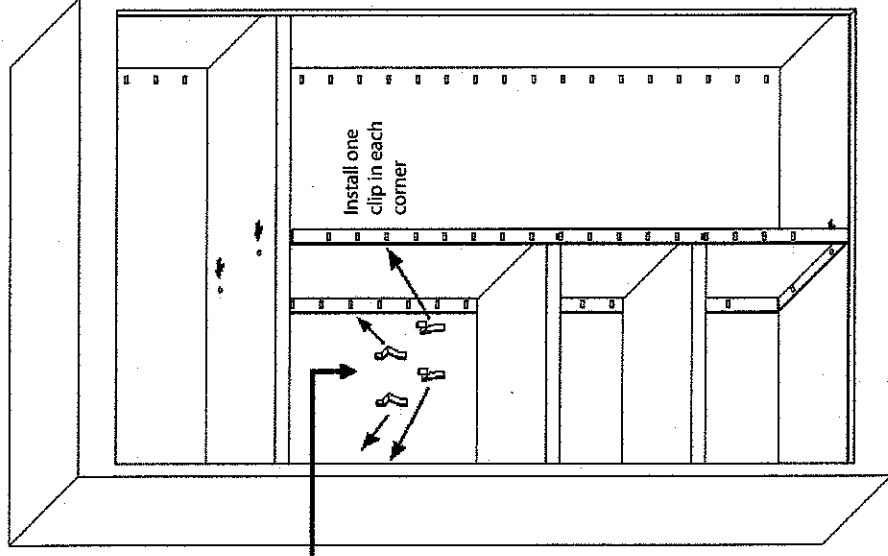


### 5

Install the 2 hanger rod supports under the front and back lips of the top shelf on the right side of the vertical panel. Position the hanger rod supports approximately 2 inches from each end of the hanger opening.

Install the hanger rod onto the hanger rod supports.

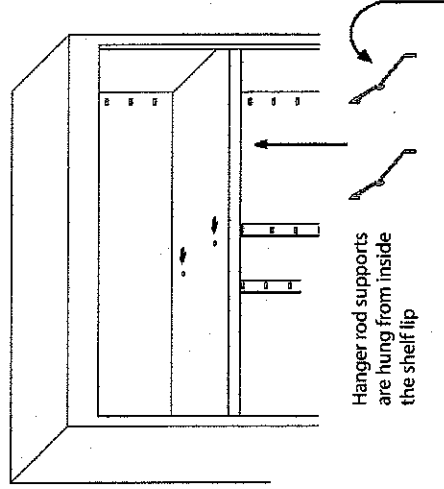

Top Shelf - Side View

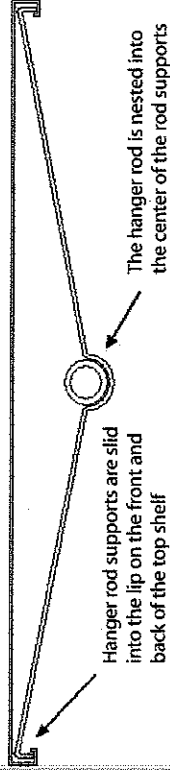

Hanger Rod