




Sandusky Cabinets, Inc.

## WARDROBE KIT INSTALLATION INSTRUCTIONS

NO TOOLS REQUIRED

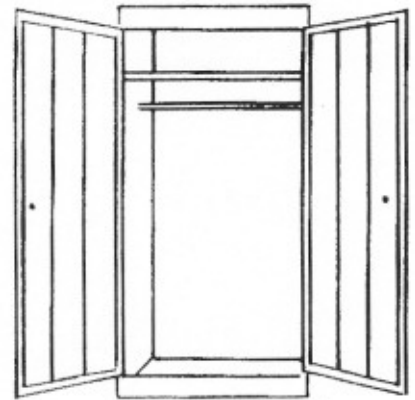

### PARTS DESCRIPTION

(A) HANGER ROD SUPPORTS


### NO. REQUIRED

2



(B) HANGER ROD

1




(C) SHELF BRACKET - SUPPLIED  
WITH CABINET

4



(D) FULL WIDTH SHELF - SUPPLIED  
WITH CABINET


1

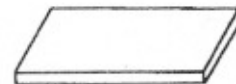

1. Install locking hardware per enclosed instructions.
2. Remove all existing shelves and shelf brackets from the cabinet.
3. Insert a shelf bracket (C) in the second slot from the top on each of the shelf bracket strips on the left and right sides of the cabinet. This will determine the height for the full shelf (D).
4. Place a full width shelf (D) on top of these brackets.
5. Install the two hanger rod supports (A) under the front and back lips of the shelf. Insert in a horizontal position about two inches from the side (one each left and right) and straighten downward to a vertical position, locking in the bracket.
6. Place the hanger rod (B) into these supports.

The wardrobe kit is now fully assembled.

**NOTE:** You may require less hanging height and therefore be able to position the hanger rod in a lower position allowing you to use additional shelves in the upper section or you may want to utilize another wardrobe kit (see diagrams below).

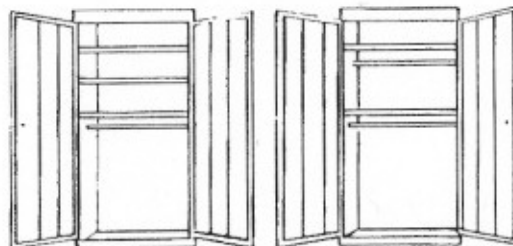

Thank you for choosing a Sandusky product.

MA030701