


How to Attach Your Ped - INSTRUCTIONS

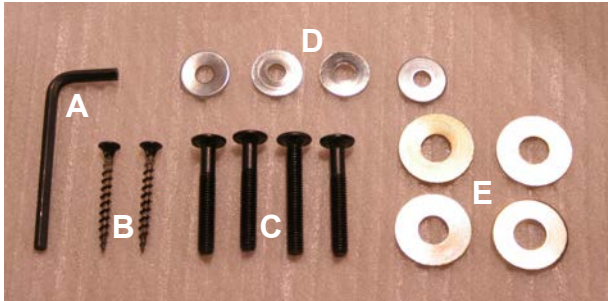

Organize your parts and hardware.

Hardware Components should include: **A) 1 Assembly Key**
B) 2 Wood Screws **C) 4 Large Bolts** **D) 4 Small Washers**
E) 4 Large Washers

IMPORTANT: TURN DESK SHELL UPSIDE DOWN BEFORE ATTEMPTING TO ATTACH PED.



STEP 1: REMOVE DRAWERS FROM PED. To remove drawers, you must press down on lever on right side of drawer, pull up on lever on the left side, and pull out drawer simultaneously.



STEP 2: Place Small Washer and Large Washer on Large Bolt. Align Ped with Holes in Desk Shell and secure with Bolts. Do not tighten completely until you pull Ped toward front of Desk Shell and position Ped so that it is snug with the Desk Leg.



STEP 3: Secure Side of Ped to Desk Shell with Wood Screws, one screw toward the front of the desk and the other screw toward the back.



IMPORTANT: FLIP DESK SHELL AND PED ASSEMBLY RIGHTSIDE UP BEFORE PLACING DRAWERS IN PED.