


MFTT####, MTT####, MSP####, MDP#### - INSTRUCTIONS

Organize your parts and hardware. You will need (2) people, a Phillips head screwdriver and a rubber mallet.

Parts:

A) Top Bracket(2) • **B)** Foot Bracket(2) • **C)** Back Support(2) • **D)** Front Support(2) • **E)** Exterior Leg Cover(2) • **F)** Interior Leg Cover(2) • **G)** Wire Management Trough (ITEM MTT### ONLY) • **H)** Modesty • **I)** Table Top

NOTE: Back Supports differ from Front Supports with additional holes for modesty attachment.

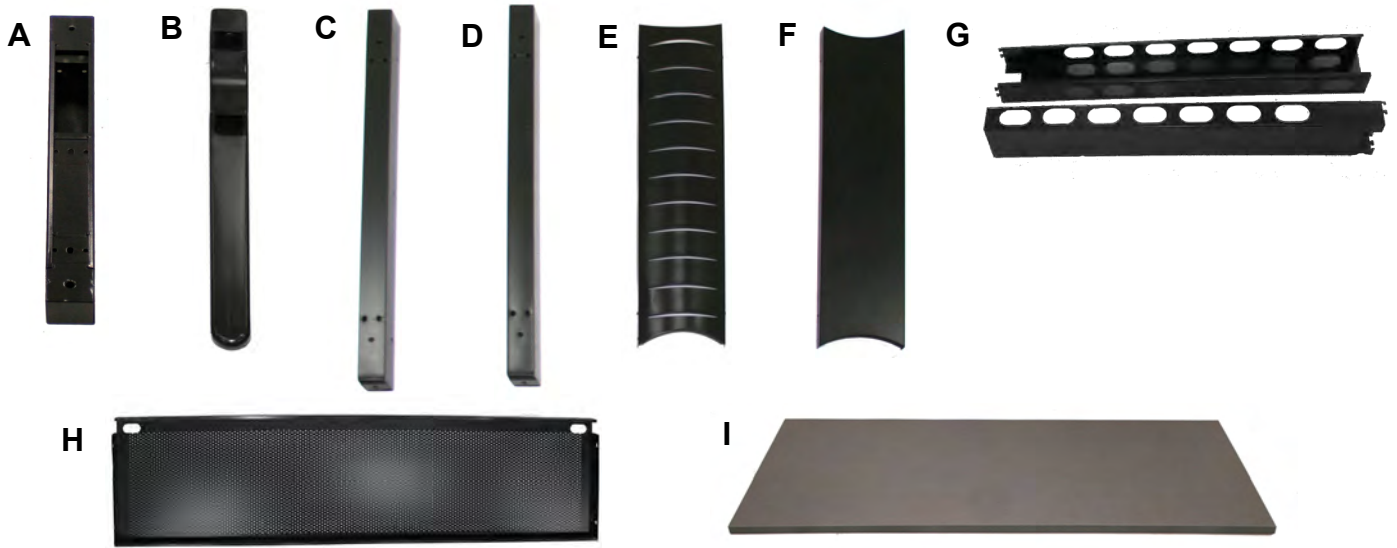


Hardware:

J) Screws(6) • **K)** Washers(4) • **L)** Bolts(12) • **M)** Glides(4)



STEP 1: Insert 2 Glides(M) into each of the Foot Brackets(B).

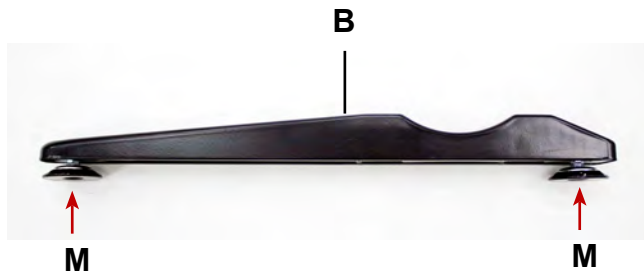

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

MFTT####, MTT####, MSP####, MDP#### - INSTRUCTIONS

BEFORE STARTING STEP 2A-B, NOTE THE HOLE PLACEMENT IN FIGURE 1.


The set of three holes on each of the Front Supports and Back Supports should face in toward one another.

STEP 2A: Assemble Legs by inserting **Back Supports(C)** into each **Foot Bracket(B)**.

NOTE: Modesty Holes on Back Supports should face interior side as shown below.

STEP 2B: Now insert the **Front Supports(D)** into each **Foot Bracket(B)**. Then insert each **Top Bracket(A)** into the **Front Supports(D)** and **Back Supports(C)**. Finally, attach the **Foot Brackets(B)** and **Top Brackets(A)** to the **Front Supports(D)** and **Back Supports(C)** with **4 Bolts(L)** per Leg.


NOTE: Do not tighten bolts until all bolts have been started.

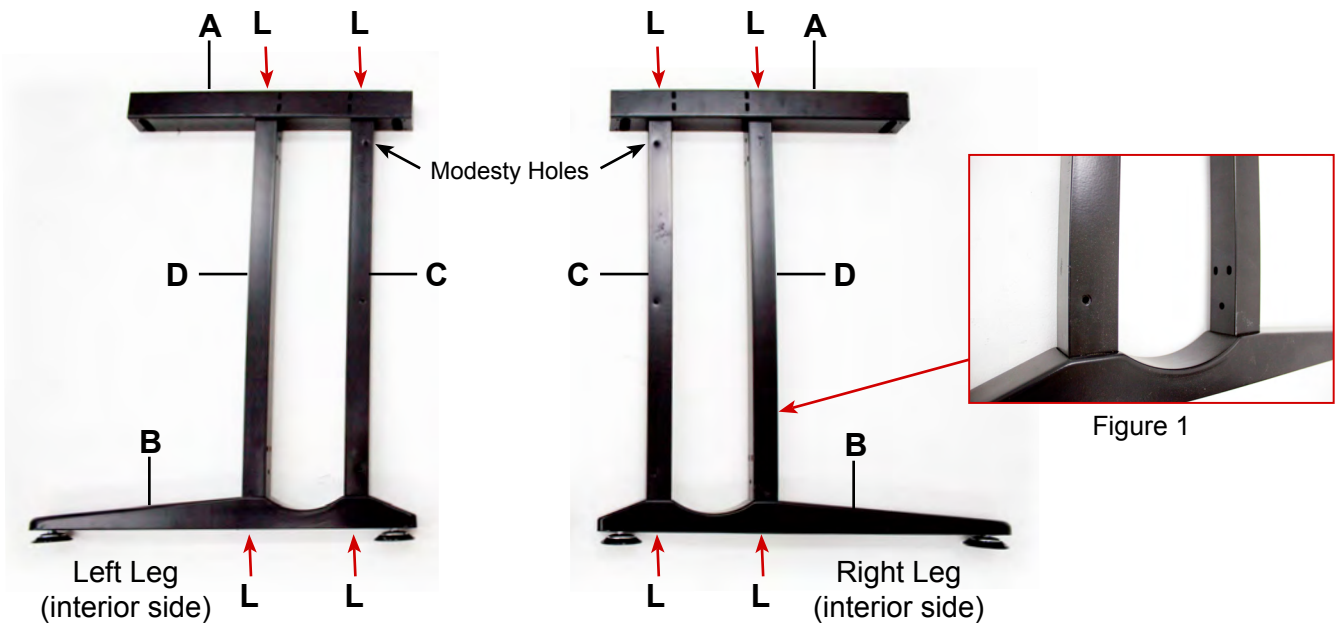

STEP 3A: Snap the **Interior Leg Cover(F)** into **Back Support(C)** and **Front Support(D)** using a rubber mallet.


NOTE: Interior Leg Cover is installed on the side with the modesty holes.

STEP 3B: Snap the **Exterior Leg Cover(E)** into **Back Support(C)** and **Front Support(D)** using a rubber mallet.

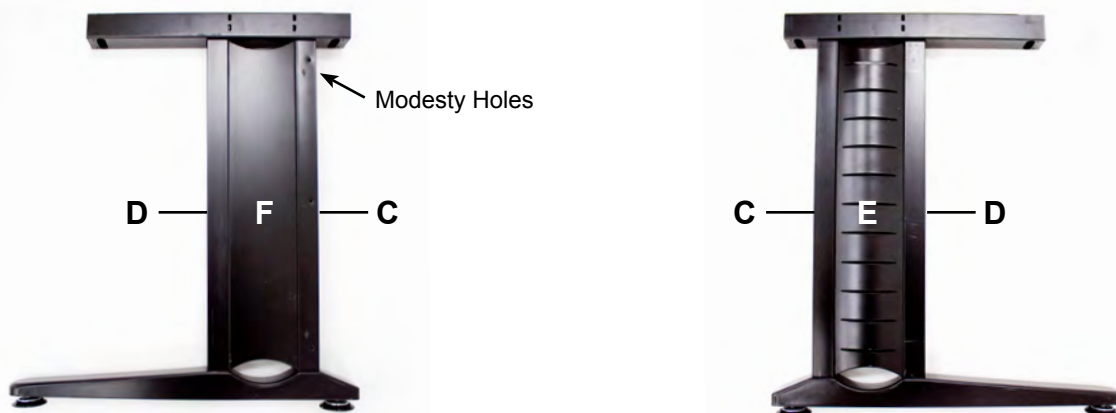


MFTT####, MTT####, MSP####, MDP#### - INSTRUCTIONS

STEP 4: Attach Modesty Panel(H) between legs with lip facing in, using 2 Bolts(L) and 2 Washers(K) for each side.

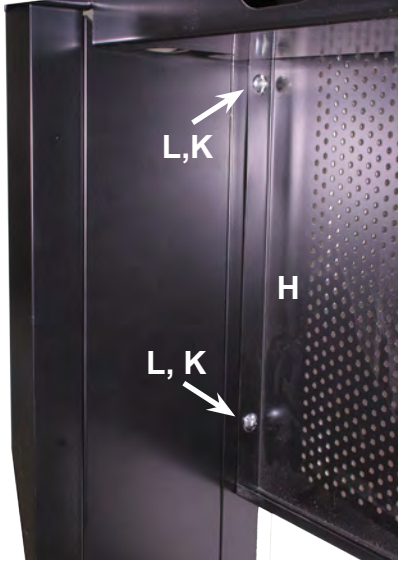

STEP 5: Flip Table Top(I) upside down and align Top Support(A) of legs so there is an even amount of overhang on the left and right sides. Align the back of the top support to the back edge of the top. Use 4 Screws(J) to attach legs to top and 2 Screws(J) to attach the Modesty Panel(H) to the table top as well.

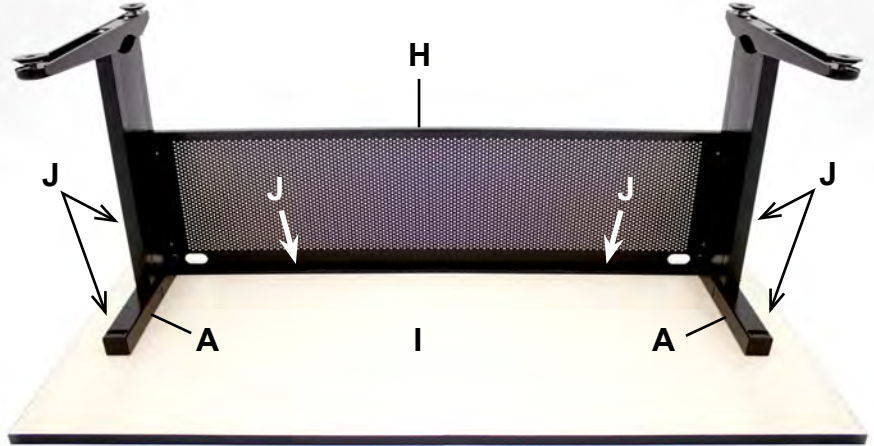

STEP 6A: Using (2) people, flip the desk upright.

STEP 6B: ONLY APPLIES FOR ITEM MTT####. Extend the Wire Management Trough(G) and hook onto the Top Supports(A) on each of the legs.

