

SRDRT2BF-LRDDS7135-VRDDS7135- INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.

Reception Desk

Hardware :

A: Corner Brackets(6) • **B:** Small Screws(36) • **C:** Cam Pins(16) • **D:** Cam Covers(16)

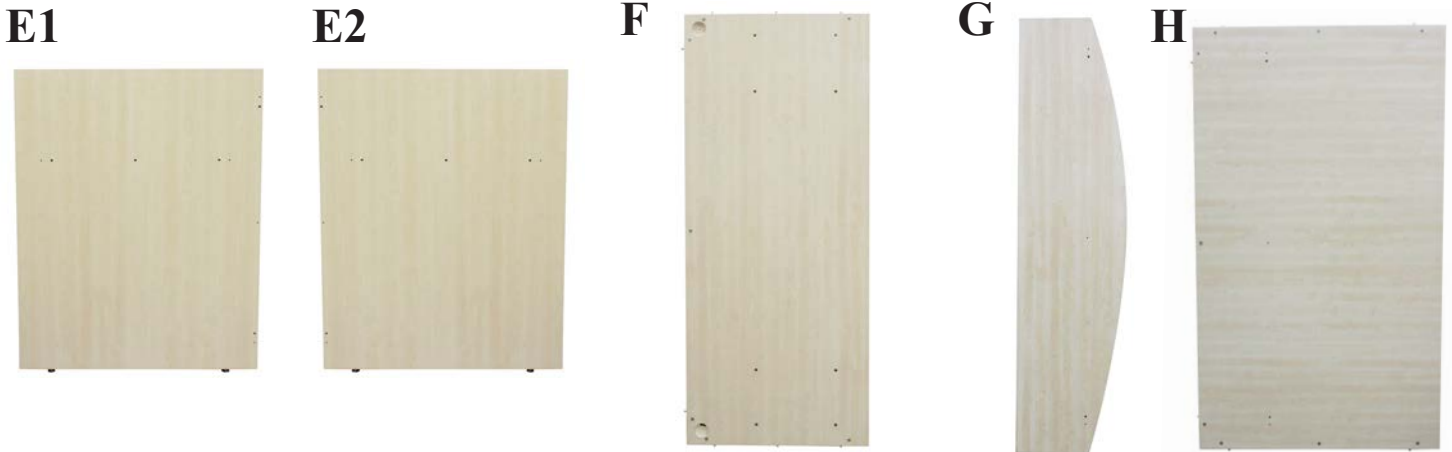


Fig. 1a



Parts :


E1: Right Leg **E2:** Left Leg • **F:** Desk Top • **G:** Transaction Top • **H:** Modesty



STEP 1 : Screw cam pins(C) into legs(E1&E2).
(5 each.)

Right leg(E1)

Left leg(E2)

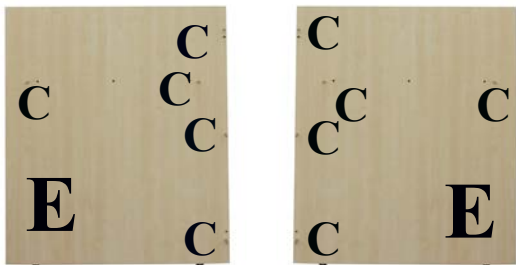

STEP 2 : Lay modesty(H) down so the cam locks face up and connect right leg(E1) to the modesty by inserting cam pins(C) into locks. **DO NOT TIGHTEN CAM LOCKS YET.**



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

SSP4224-LRDDS7135-LRDRT4724-VRDDS7135-VRDTR4724 - INSTRUCTIONS



You will need 2 person(s) for this assembly.

You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.

STEP 3a : Screw 3 cam pins(C) into Modesty(H).


STEP 3b : Attach desk top(F) to modesty(H) and right leg(E1) by inserting cam pins(C) into locks and tightening (See Fig. 1a).

You may need to move the leg's(E) cam pins(C) out of the locks on modesty(H) from step 2 to fit the desk top in snugly.

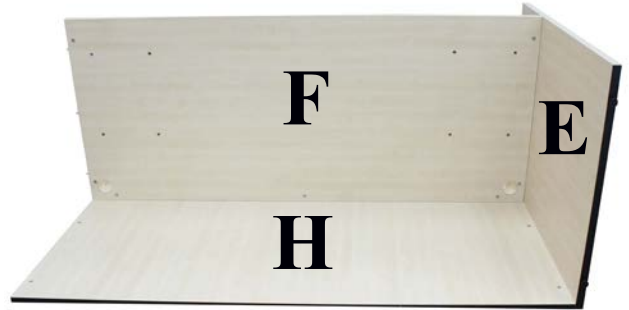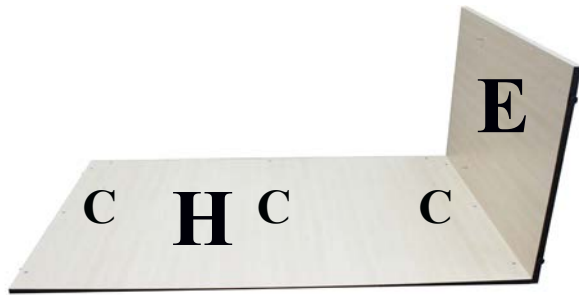

STEP 4a : Attach left leg(E2) by inserting cam pins(C) into locks and tightening. (See Fig. 1a)

STEP 4b : Attach 4 corner brackets(A) to bottom of desk with 6 small screws(B) each. Place them in the locations shown on the image below.

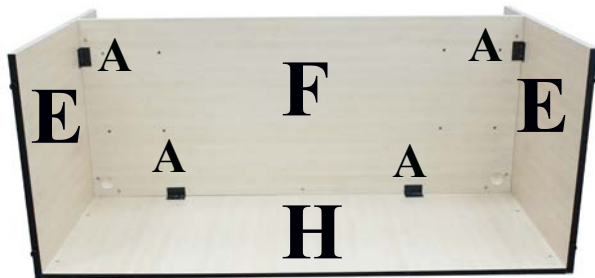

STEP 5 : Attach 3 cam pins(C) to transaction top(G) then attach transaction top to desk by inserting cam pins(C) into locks and tightening (See Fig. 1a). Secure top to desk by attaching last 2 corner brackets(A) to the underside of the transaction top and sides with 6 screws(B) each bracket.

