

SRDRT2BF-LRDRT4724-VRDRT4724- INSTRUCTIONS


You will need 2 person(s) for this assembly.

You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.

Reception Desk Return

Hardware :

A: Small Corner Brackets(3) • **B:** Large Corner Brackets(2) • **C:** Flat Brackets(4) • **D:** Dowel Rods(2)
E: Cam Pins(7) • **F:** Small Screws(54) • **G:** Cam pin plug(3) • **H:** Cam Lock Cover(12) • **I:** Cam hole plug(3)

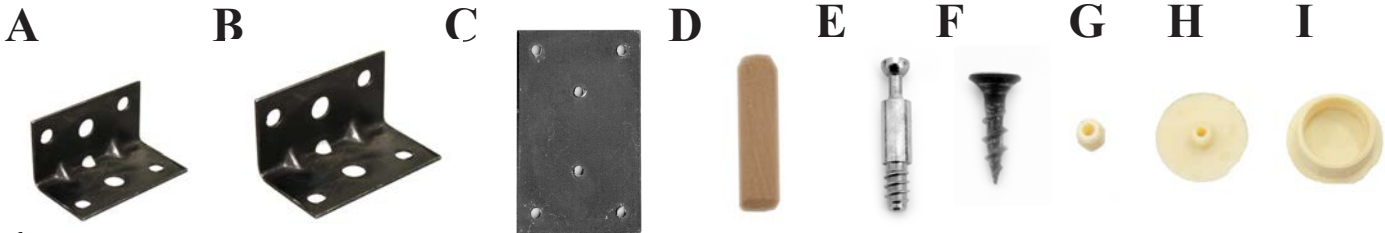


Parts :

J: Leg • **K:** Modesty • **L:** Top



STEP 1 : Screw 2 cam pins(E) into modesty(J).

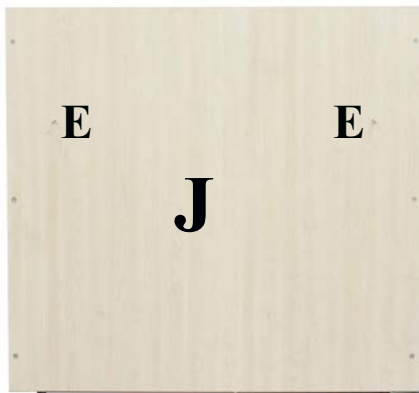

STEP 2 : Attach top(L) to modesty(J) by inserting cam pins(E) into locks and tightening

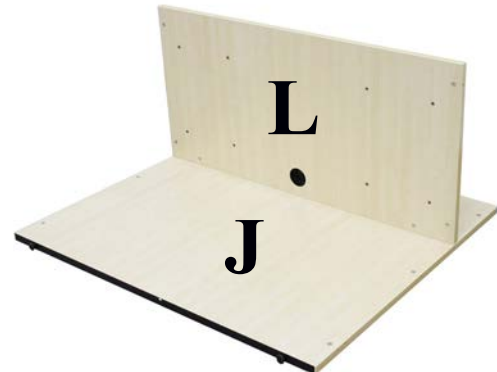


Fig. 1a

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

SRDRT2BF-LRDRT4724-VRDRT4724- INSTRUCTIONS

You will need 2 person(s) for this assembly.

You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.

Step 3 determines a left return or right return. For a left return follow step 3 and then finish instructions. For a right return skip step 3 and go on to step 3a and then finish step 4 & 5.


LEFT RETURN

STEP 3 : Place 5 cam pins(E) into Leg(K) and attach to return shell by inserting cam pins into locks and tightening.




RIGHT RETURN

STEP 3A : Place 5 cam pins(E) into Leg(K) and attach to return shell by inserting cam pins into locks and tightening.

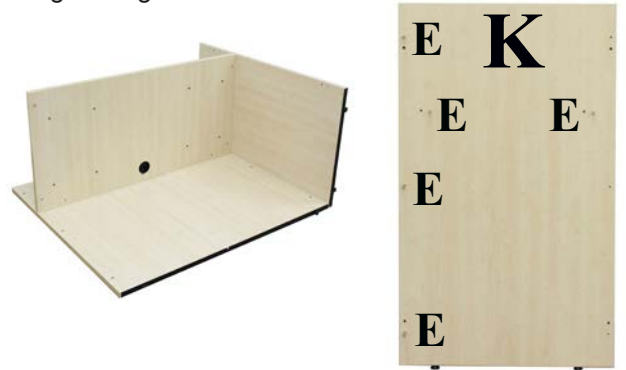

STEP 4 :

Place 3 small corner brackets(A) and 4 flat brackets(C) on the bottom of the desk top(L) in the locations shown below. Use 6 small screws(F) for each corner brackets(A) and 3 small screws(F) for each flat brackets(C).

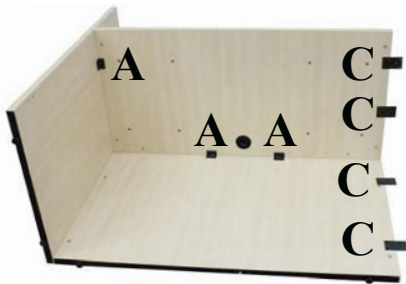

STEP 5:

Connect return to desk by connecting and screwing the flat brackets(C) into bottom of desk top and inside of desk leg with 3 small screws(F) each flat bracket(C).

