

Brainstorm Workbench Assembly Instructions




Assembly Kit comes with 8 brace Plates



4 Legs, 32 Screws ¼-20 x 20mm serrated




4 Threaded Casters

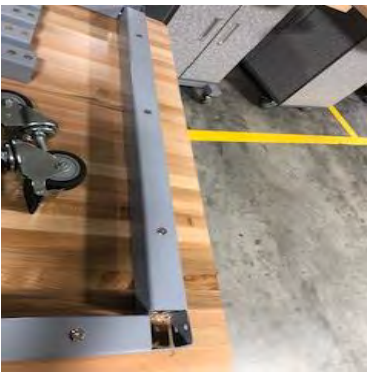

Step 1: Lay Butcher Block Top upside down on padded surface, so as not to damage top. Frame will come attached to top. Should only be snug, not tight.



Step 2: Take leg as shown and turn so inserts align with holes in frame. Use the ¼-20 x 20mm serrated screws to bolt leg to frame. Continue on each corner until all four legs are attached to frame.

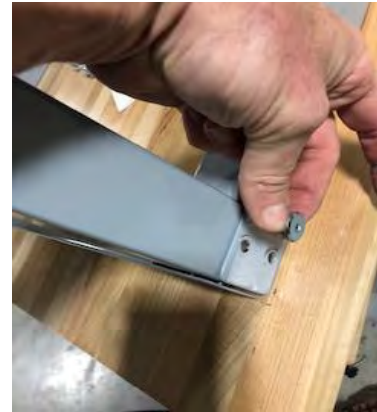

Step 3: After all legs are tight. Go around frame and tighten all bolts that attach frame to top.



Step 4: Attach brace plate to leg and frame using ¼-20 x 20mm serrated bolts. 2 plates per leg, 8 total.



Step 5: Attach threaded caster to leg insert. Tighten with ¾" wrench. Continue until all 4 casters are tight.