

EVERLAST CLIMBING™

INSTALLATION INSTRUCTIONS FOR ADAPTIVE HAND HOLDS



NOTE: Hand Holds are only for use with certain Everlast Climbing™ walls. Call for details. Please use provided mat loop extensions, if adding holds to wall with existing mat-locking system.

FOOT HOLD INSTALLATION INSTRUCTIONS: (Please read all instructions thoroughly before starting to install)

1. Place Adaptive Foot Hold over desired hole pattern ~ 12" apart for the blue foot holds or ~ 24" apart for the red foot holds.
2. Insert 3/8" x 5 1/2" Hex bolt with a 3/8 washer into slotted holes, find the T-nuts, and hand screw them in to start them.
3. Using a 9/16" socket in a socket wrench, ratchet the bolts tight. (Take care not to cross-thread the T-nuts.)




Adaptive Foot Hold Hardware

< 9/16" socket & socket wrench (NOT included)

< 3/8" x 5 1/2" hex bolt with 3/8" washer (included)

HAND HOLD INSTALLATION INSTRUCTIONS: (Please read all instructions thoroughly before starting to install)

1. Insert 3/8" x 2" bolt through Adaptive Hand Hold and into the climbing wall.
2. Place Adaptive Hand Hold over desired hole (T-nut) in wall, lining up the hole in the hand hold with the hole in the climbing wall.
3. Using the special 5/16 Allen Wrench (included), gently start threading the bolt into the T-Nut. (Take care not to cross-thread the T-nuts.) Spin the wrench and tighten the hold to desired desired position (vertical, horizontal or angled).

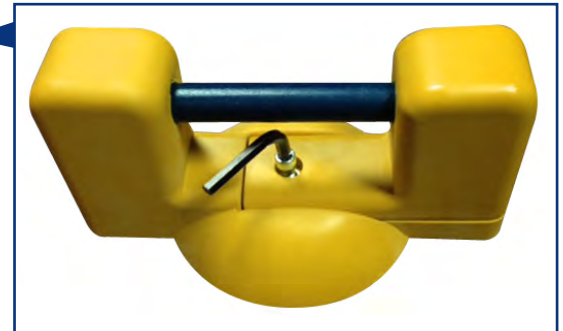

Adaptive Hand Hold Hardware

5/16 Allen Wrench (included) >

3/8" x 2" Bolt (included) >



THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL IS ESSENTIAL AND IS YOUR RESPONSIBILITY. PLEASE REFER TO THE SAFETY, CARE AND MAINTENANCE INSTRUCTIONS.