


**Parts:**


**WD11865/WD11875 Assembly Instructions**  
**WD11866/WD11876 Assembly Instructions - No Top**

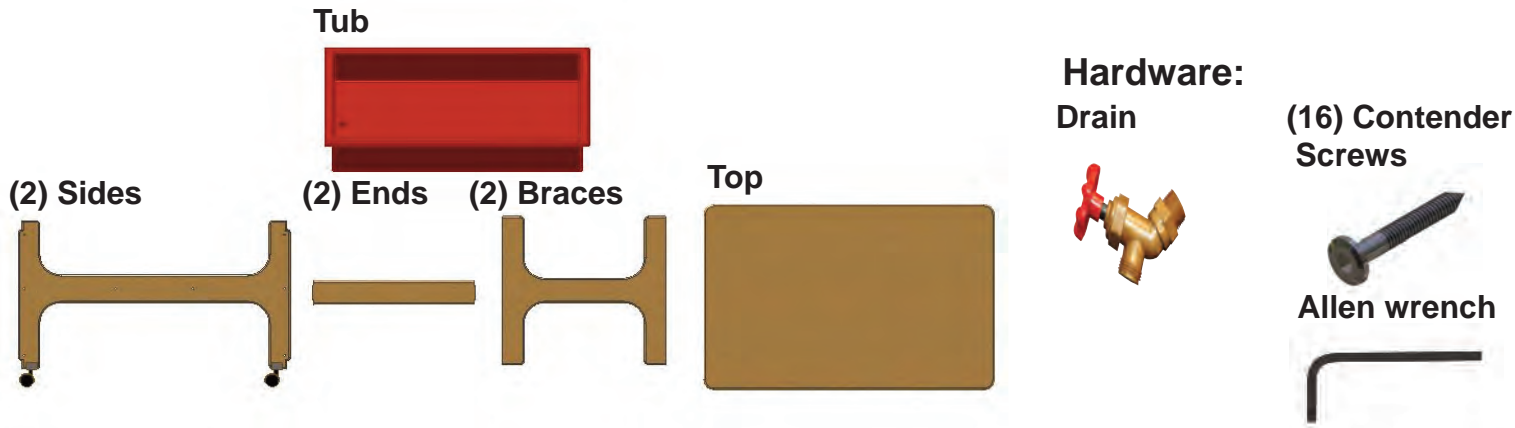

**Step 1:** Attach (2) Ends and (2) Braces to Side piece. Use (8) Contender screws and Allen wrench.



**Step 2:** Attach second Side using (8) Contender screws and Allen wrench.

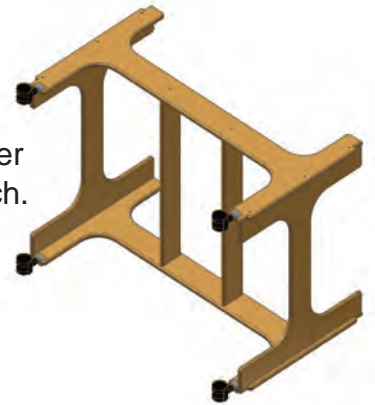

**Step 3:** Insert Drain into hole in Tub from bottom. Place Tub in frame. Place Top over Tub if unit comes with one.



Assembly is now complete. Do not drill. Do not overtighten.