


Parts Diagram

Ruckus™ Collection
4-Leg Chair

September 2021

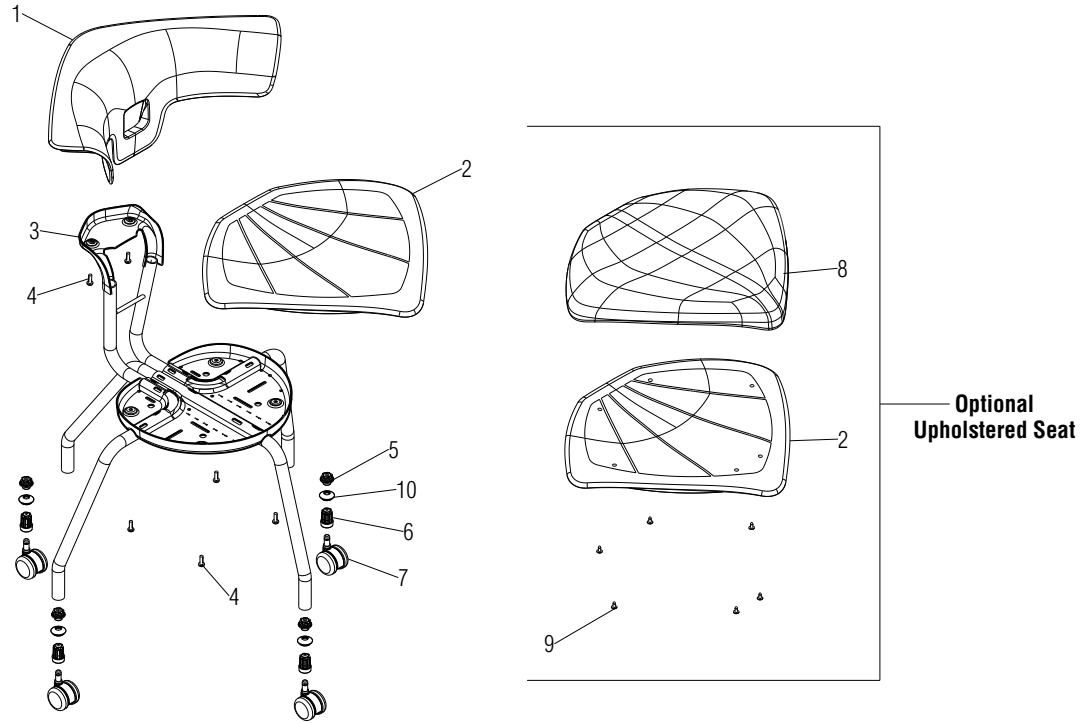

Note: Ruckus chair frames are designed/sized in the factory for either castors or glides.

Changing Caster Chair to Glide Chair

Option 1: Replace the caster chair frame with a glide chair frame using the RKRF part number.
Option 2: Replace stem caster with non-standard stem bell glide (10.0150.X). Will add approximately 1/4" to height of chair.

Changing Glide Chair to Caster Chair

Option 1: Replace the glide chair frame with a caster chair frame using the RKRF part number.

.XX = Select Color or Fabric
RKRSC includes 12.0055.CZ.

RKRf includes the frame and glides or casters attached at the factory.

Item 11 glide cap removal tool (not shown) is used to remove old glide caps for replacement of felt caps. See KI-RR-000030 for instructions.

Note: If Item 11 is out of stock, a flat head screw driver can be used to remove felt cap.

Item	Part Number	Item Description	Req Qty	Item	Part Number	Item Description	Req Qty
1	46.4302.XX.X	Backrest, 15" & 18" Chairs	1	5	10.0700.GPL.X	Glide, Nylon Base Swiveling	4
2	46.4303.XX.X	Seat, 15" & 18" Chairs	1		10.0700.GSL.X	Glide, Steel Base Swiveling	4
	46.4303.U.XX.X	Seat, 15" & 18" Upholstered Chairs	1		10.0702.GFT.X	Glide, Felt Base Swiveling (uses Item 10)	4
3	RKRf	Weldment, 18" 4-Leg Caster Chair Frame (uses 87.0710.XX frame)	1	6	46.5417.BL.X	Caster Bushing, 1" O.D. 13 Gauge Tube	4
	RKRf	Weldment, 18" 4-Leg Swivel Glide Chair Frame (uses 87.0711.XX frame)	1	7	46.4116.BL.A.X	Caster, 50mm Carpet	4
	RKRf	Weldment, 15" 4-Leg Caster Chair Frame (uses 87.0716.XX frame)	1		46.4113.BL.A.X	Caster, 50mm Hard Floor	4
	RKRf	Weldment, 15" 4-Leg Swivel Glide Chair Frame (uses 87.0717.XX frame)	1	8	RKRSC	Assembly, Replacement Seat Cushion	1
4	12.2801.X	Screw, 1/4 x 3/4" PH PAN HD HI-LO	6	9	12.0055.CZ.X	Screw, #10-16 x 1/2" PTH Type AM T/F ZC	6
				10	10.0129.X	Felt Cap, Replacement (used on Felt Glide 10.0702.GFT.X)	4
				11	10.0138.X	Removal Tool, Felt Glide Cap (not shown) (see note)	1

