



MAINTENANCE-FREE QUIET K. D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

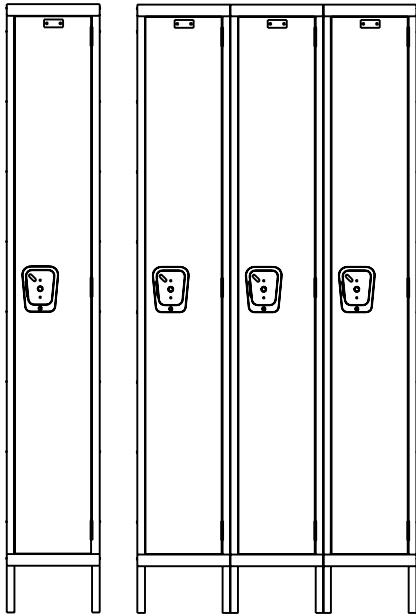

1 WIDE

3 WIDE


SINGLE TIER

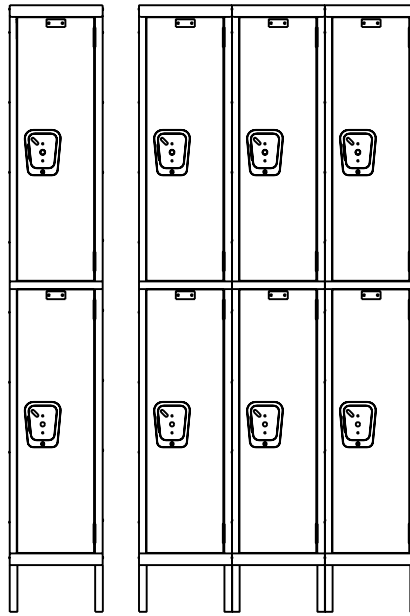

1 WIDE

3 WIDE

DOUBLE TIER

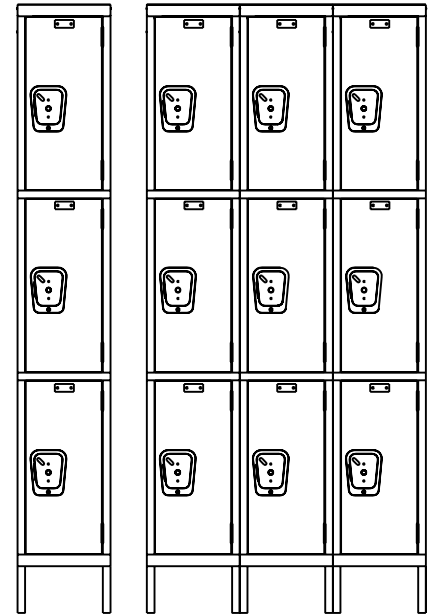

1 WIDE

3 WIDE

TRIPLE TIER

General Instructions

1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.
5. Items with suffix (xx) are available options.

CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.
FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.




2823 W. Orange Ave.
Apopka, FL 32703

Phone (866) 566-0500
Fax (407) 464-3610

www.Hallowell-List.com

MAINTENANCE-FREE QUIET K. D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

PACKAGE CONTENTS

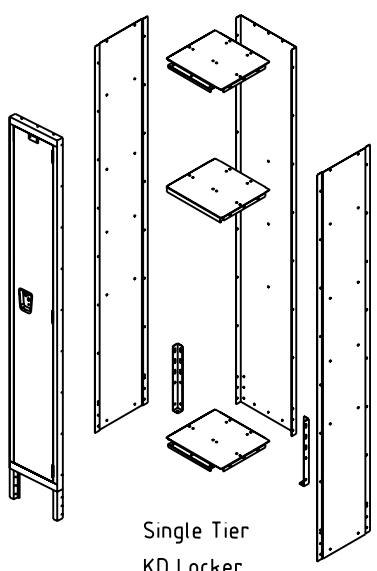REF. NO.	DESCRIPTION	PART NO.	1-WIDE QUANTITY			3-WIDE QUANTITY			
			1-TIER	2-TIER	3-TIER	1-TIER	2-TIER	3-TIER	
①	REAR PANEL	KRww72	1	1	1	3	3	3	 <p>Single Tier KD Locker</p>
②	RIGHT/LEFT SIDE PANEL	KPdd72	2	2	2	4	4	4	
③	TOP/BOTTOM SHELF	KSwwdd	2	3	4	6	9	12	
④	HAT SHELF	KHwwdd	1	-	-	3	-	-	
⑤	SINGLE CEILING HOOK	H5K	2	4	-	6	12	-	
⑥	DOUBLE CEILING HOOK	H7K	1	2	3	3	6	9	
**⑦	COAT ROD BRACKET	**TRH 200	**2	**4	-	**6	**12	-	
**⑧	COAT ROD	**KCR	**1	**2	-	**3	**6	-	
⑨	DOOR FRAME ASSEMBLY	HMDFww78-t	1	1	1	3	3	3	
*⑩	DOOR	HMDHww72-tPL	1	2	3	3	6	9	
*⑪	DRAWN HANDLE S.S.	TBECK1	1	2	3	3	6	9	
*⑫	RIVET (HANDLE)	RV102	1	2	3	3	6	9	
*⑬	BUMPER	KDB300	1	2	3	3	6	9	
*⑭	FRICTION BUTTON	FB002	1	2	3	3	6	9	
*⑮	RIVET (BUTTON)	RV100	1	2	3	3	6	9	
*⑯	RIVET (HINGE)	RV102	6	8	12	18	24	36	
⑰	REAR LEG	KLG	2	2	2	2	2	2	
⑱	NUMBER PLATE	NPH	1	2	3	3	6	9	
⑲	NUMBER PLATE RIVET	RV101	2	4	6	6	12	18	
⑳	3/8" SLOTLESS BOLT	MBT300	62	74	70	134	166	188	
㉑	HEX NUT	N201	60	70	64	128	154	170	
㉒	ESCUTCHEON PLATE	RPE100	1	2	3	3	6	9	
㉓	HI-DOME CAP NUT	N110	2	4	6	6	12	18	

PART NO. LEGEND:

ww = WIDTH
 dd = DEPTH
 hh = HEIGHT (FRAME)
 t = TIER
 PART NUMBER SUFFIX SHOWS
 WIDTH, DEPTH, HEIGHT AND TIER.
 CUSTOMER TO SPECIFY.

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS,
 SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-A

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,
 SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B

- * SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY ⑨
- ** OPTIONAL ITEM

PART NO. LEGEND:

ww = WIDTH
 dd = DEPTH
 hh = HEIGHT (FRAME)
 t = TIER


**TOOLS REQUIRED: 3/8" NUT
 DRIVER (3/8" SOCKET MAY BE
 SUBSTITUTED)**

TWO-YEAR WARRANTY

HALLOWELL K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.



MAINTENANCE-FREE QUIET K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

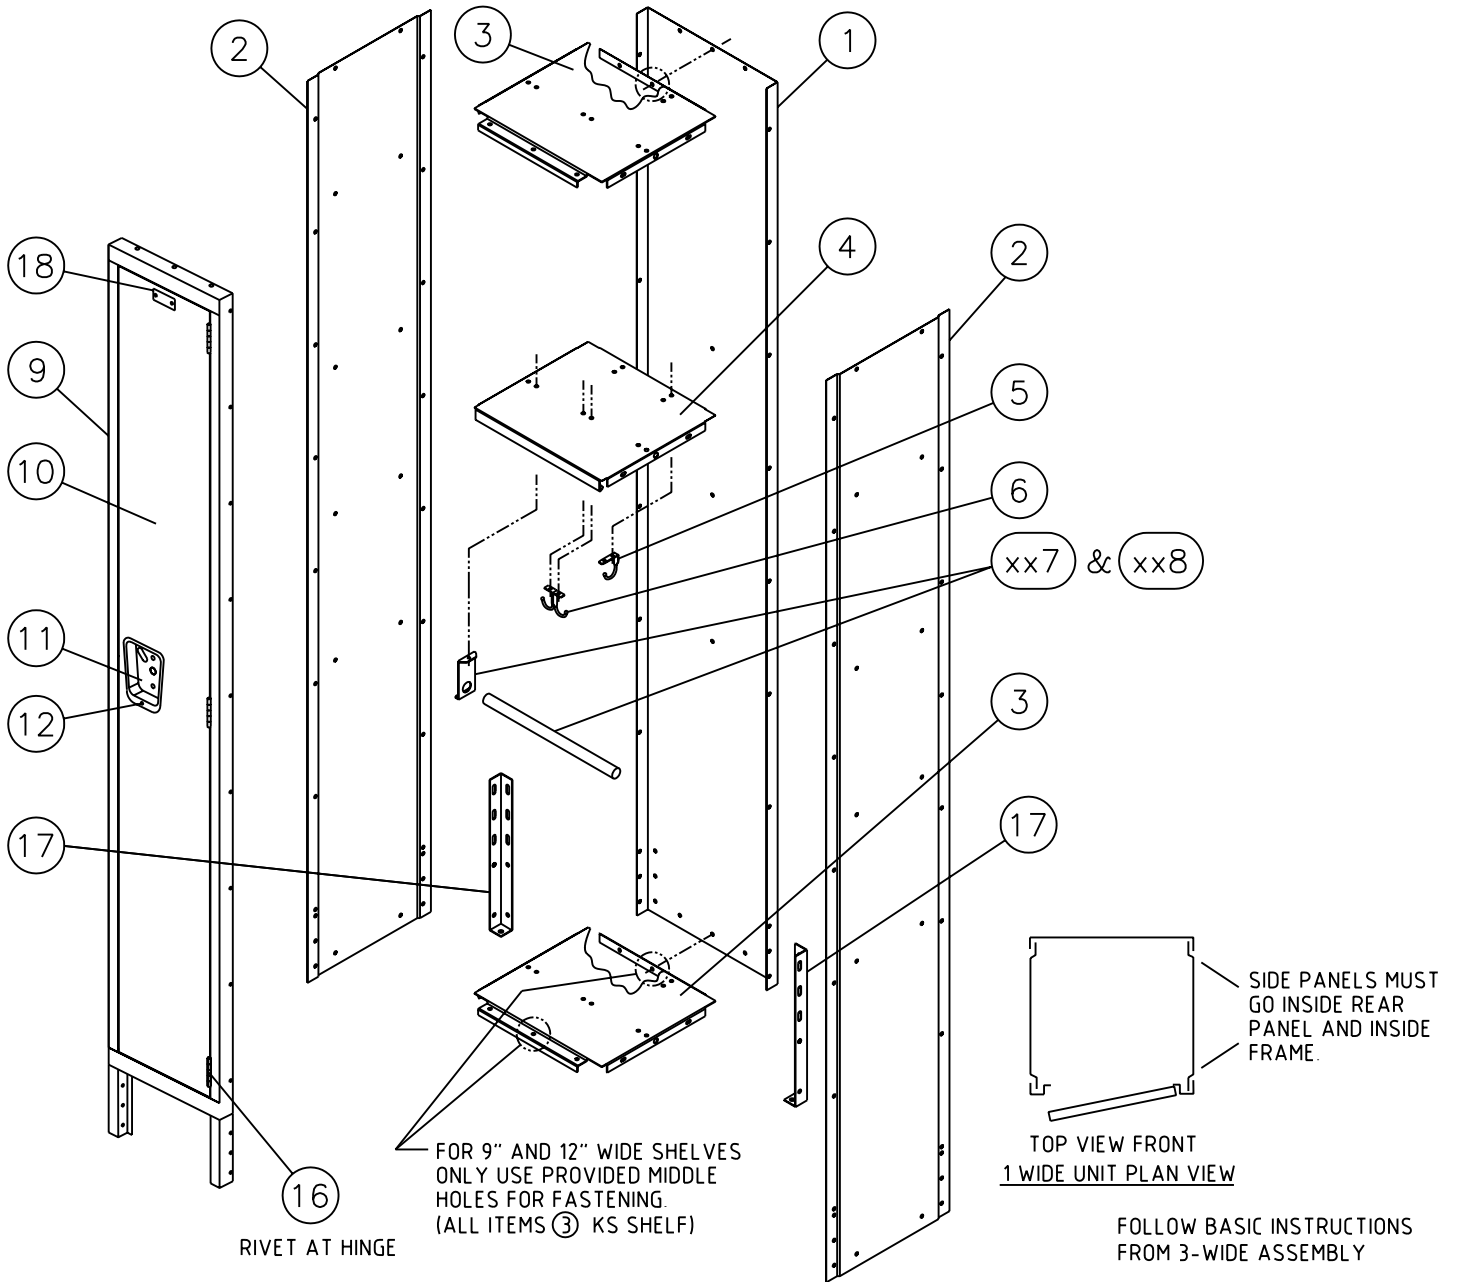

COAT ROD (KCR_{ww}) & COAT ROD BRACKETS (TRH 200) ARE OPTIONAL.

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST

COLOR

PURCHASE DATE

COMPANY NAME & CONTACT PERSON






WHERE THE PRODUCT WAS PURCHASED FROM

IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.




MAINTENANCE-FREE QUIET K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

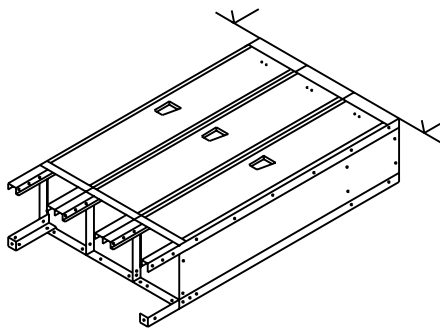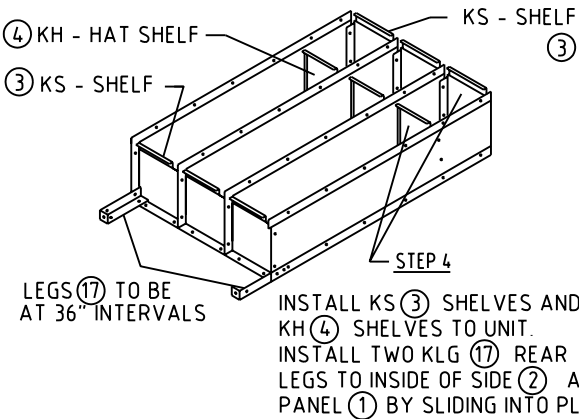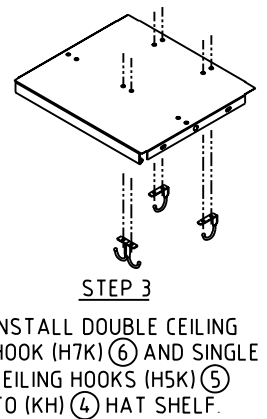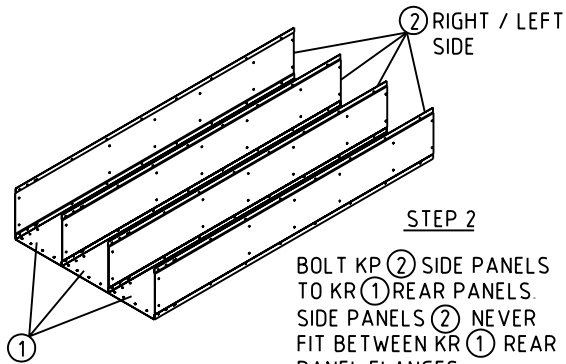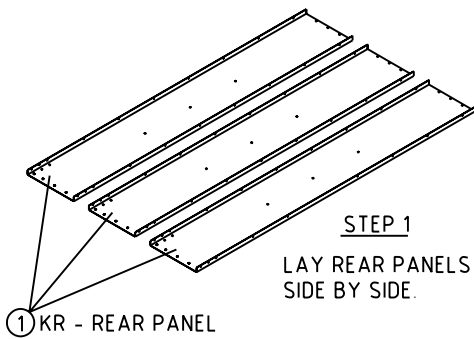

ASSEMBLY OF SINGLE ROW LOCKERS
NEVER PUT SIDE PANELS BETWEEN FRAMES OR REAR PANELS.

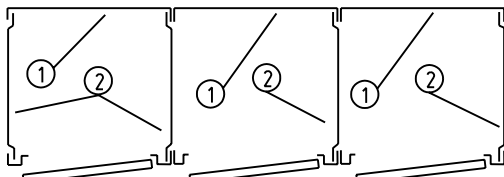



SINGLE TIER EXAMPLE - 3 WIDE UNIT PLAN VIEW

SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME.

OPTIONAL COAT ROD

BRACKETS TO BE BOLTED TO UNDERSIDE OF HAT SHELF WITH COAT ROD IN BETWEEN.

- xx ⑦ COAT ROD BRACKETS (xxTRH 200)
- xx ⑧ COAT ROD (xxKCRww)

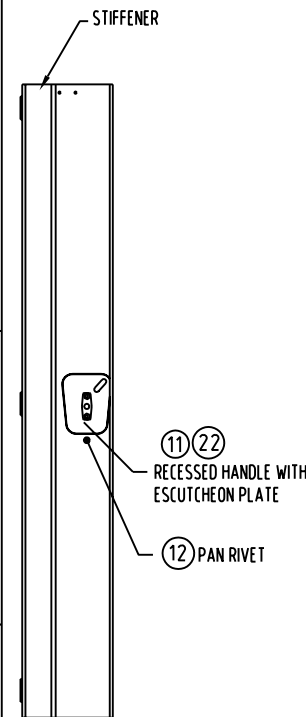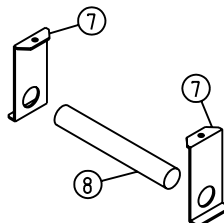

INSIDE DOOR VIEW

