


59TV Stool Seat Plate

INSTALLATION INSTRUCTIONS


⚠ WARNING

It is important to install all screws straight into the plastic seat and to not over tighten. It is only necessary to "snug" the screw to the stool plate. If using a cordless drill, set to the lowest setting that ratchets when the screw touches the stool plate. If the screw is stripped during installation, replace the stool seat or place a small amount of epoxy glue in the screw hole and reinstall the screw. Proper installation of the stool seats will ensure many years of trouble-free service.

INSTALLING SCREW ONTO STOOL SEAT

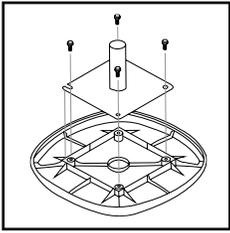

STEP 1
Invert plastic stool seat and stool plate on a flat work surface.

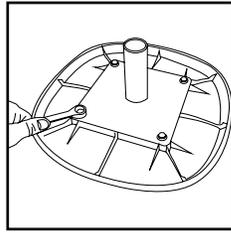


STEP 2
Firmly snug the four screws into the seat.


MAINTENANCE TIPS

1. Clean with approved cleaning agent. Use mild soap and water, damp sponge for general cleaning.
2. Do not use cleaners containing pine oils, methyl and ethyl alcohol or hydrocarbons, as these will cause deterioration of stools.
3. **DO NOT** power wash!


INSTALLING STOOL ASSEMBLIES ONTO TABLE LEGS

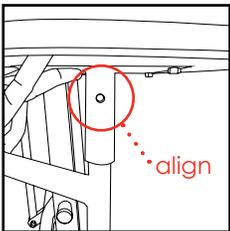


STEP 1
Slide seat post over leg tube and align holes in leg.

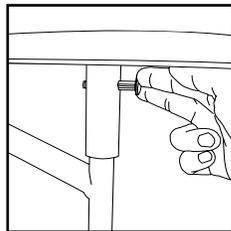


STEP 2
From the outside, insert ribbed carriage bolt inward through holes.

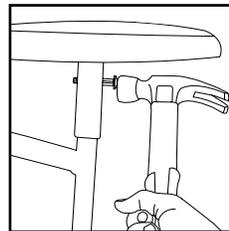


STEP 3
If necessary, strike bolt head until threads protrude on inside.

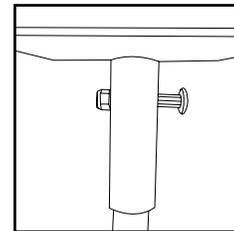


STEP 4
Thread nyloc nut onto the bolt at least 2 full rotations.

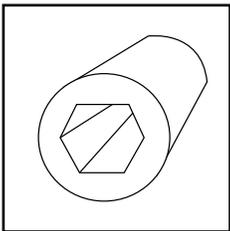

STEP 5
A 6-point socket or wrench is recommended to tighten nut (1/2").

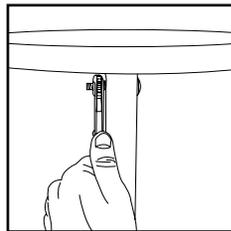

STEP 6
Tightening nut draws the ribs through the tubing.

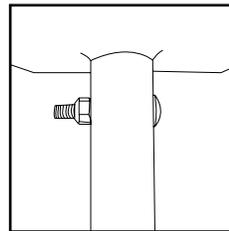

STEP 7
Tighten the nut until the nut and carriage leg head are gripping the tube.

Customer Service 800-788-1028



As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 11/2011